


For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

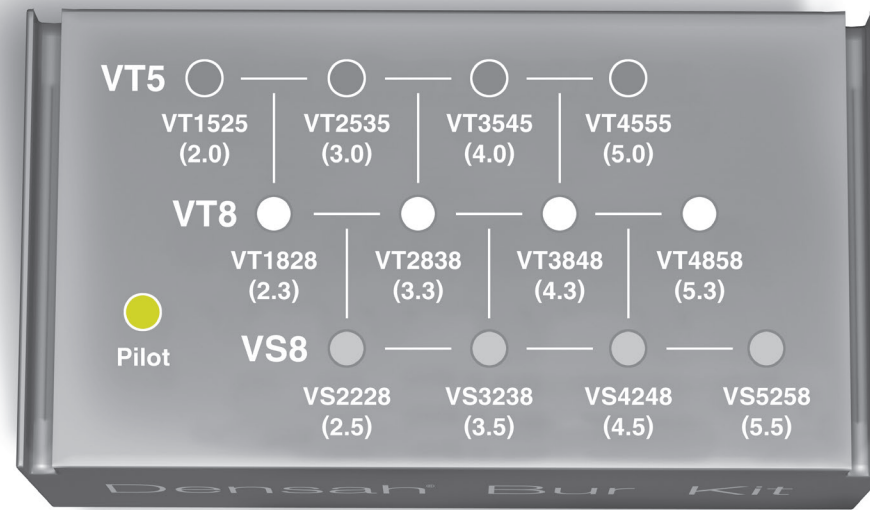

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs

Straumann®			BLX, TLX Implant																
			Soft Bone							Hard Bone (Mandible)									
										In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.									
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Tapered	3.75		Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	—	
Tapered	4.0		Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838* (3.3)	—	—	—	—	—	
Tapered	4.5		Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	—	—	
Tapered	5.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	—	
Tapered	5.5		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555* (5.0)	—	—	
Tapered	6.5		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858* (5.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858 (5.3)	VS5258* (5.5)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

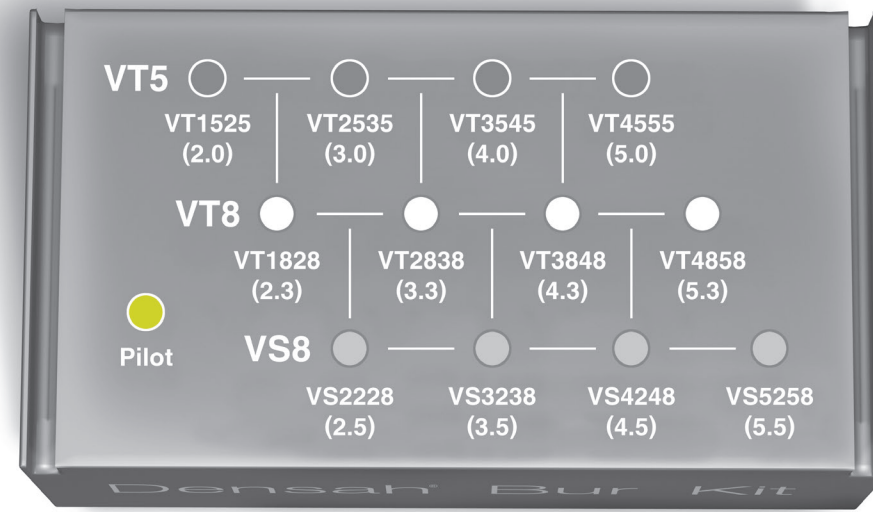

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																	
Straumann®			Bone Level Tapered (BLT)														
			Soft Bone							Hard Bone (Mandible)							
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.														
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Densah® Bur Block Display
Taper	3.3	2.0	Pilot	VT1828* (2.3)	—	—	—	—		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	
Taper	4.1	2.7	Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838* (3.3)	—	—	—	
Taper	4.8	3.2	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	

*Denotes implant placement.


* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System
 * Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

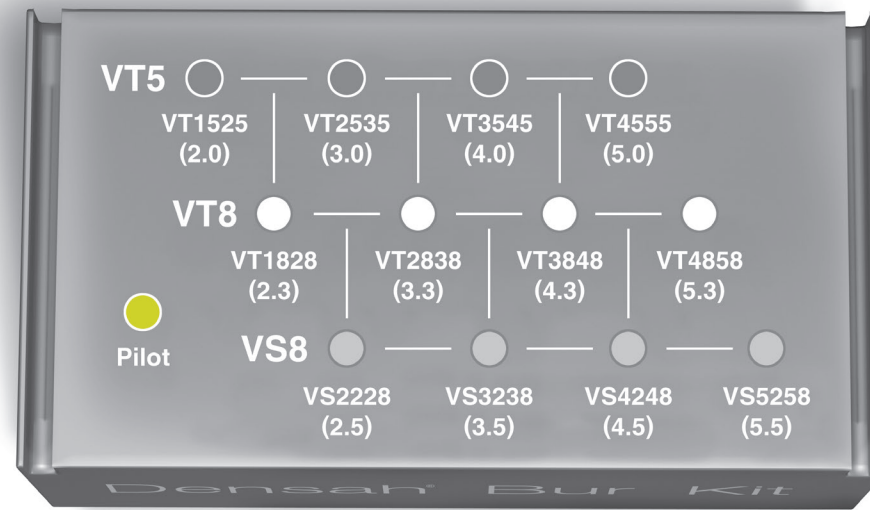

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																	
Straumann®			Standard Tissue Level														
			Soft Bone							Hard Bone (Mandible)							
										In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.							
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Densah® Bur Block Display
Straight	3.3	3.3	Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—		Pilot	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	
4.8 Restorative Diameter	4.1	4.1	Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	
Straight	4.8	4.8	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	
6.5 Restorative Diameter	4.8	4.8	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

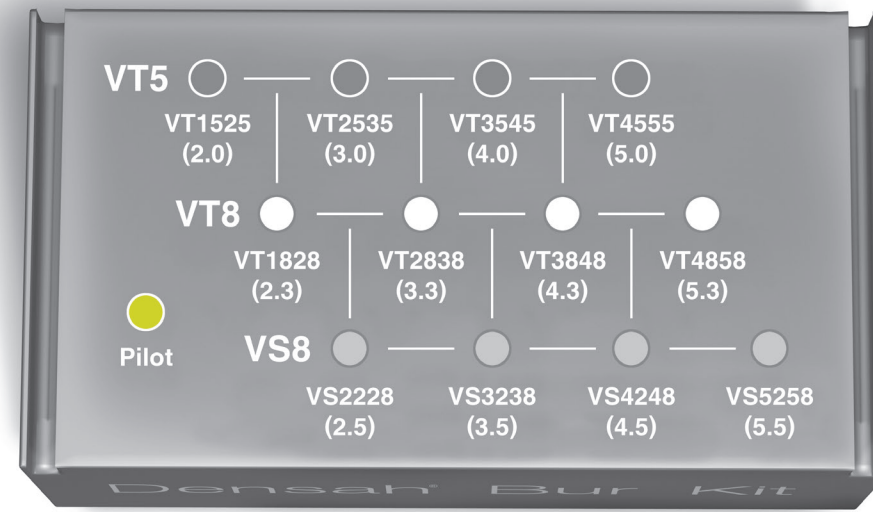

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																	
Straumann®			Standard Plus, Bone Level														
			Soft Bone							Hard Bone (Mandible)							
										In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.							
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Densah® Bur Block Display
Straight	3.3	3.3	Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	
Straight	3.5	3.3	Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—	—		Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—	—	—	
Straight	4.1	4.1	Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	
Straight	4.8	4.8	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

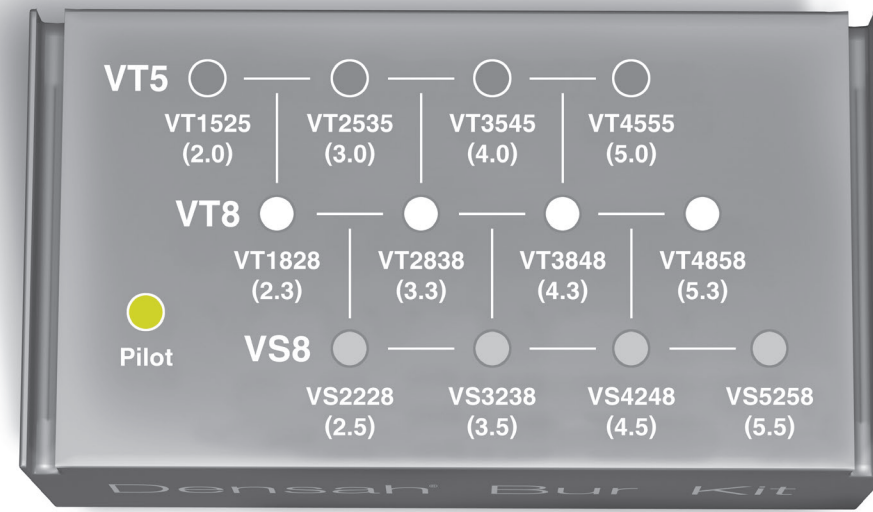

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																	
Straumann®			Tapered Effect														
			Soft Bone							Hard Bone (Mandible)							
										In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.							
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Densah® Bur Block Display
4.8 Restorative Diameter	4.8	3.3	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	
4.8 Restorative Diameter	4.8	4.1	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	
Taper	6.5	4.8	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858* (5.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4858* (5.3)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

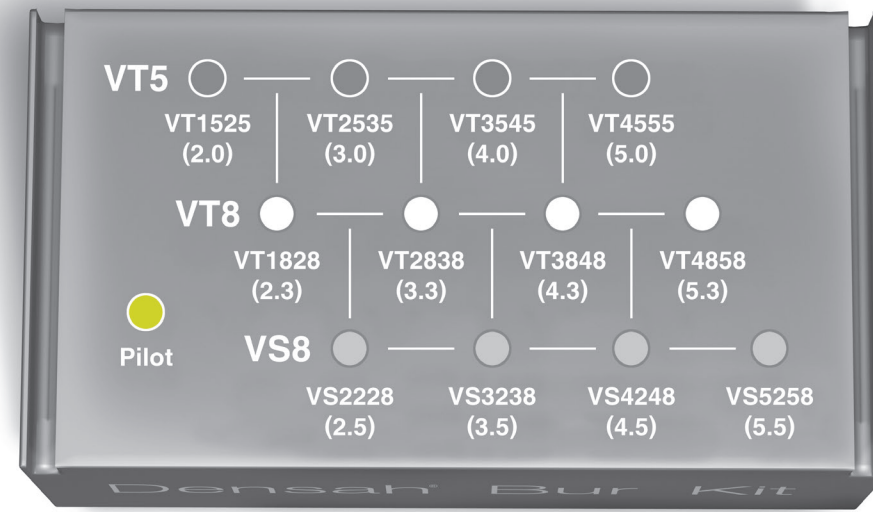

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																	
Straumann®			Quattrocone														
			Soft Bone							Hard Bone (Mandible)							
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.														
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Densah® Bur Block Display
Tapered	3.5		Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	
Tapered	4.3		Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.3)	—	—	
Tapered	5.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

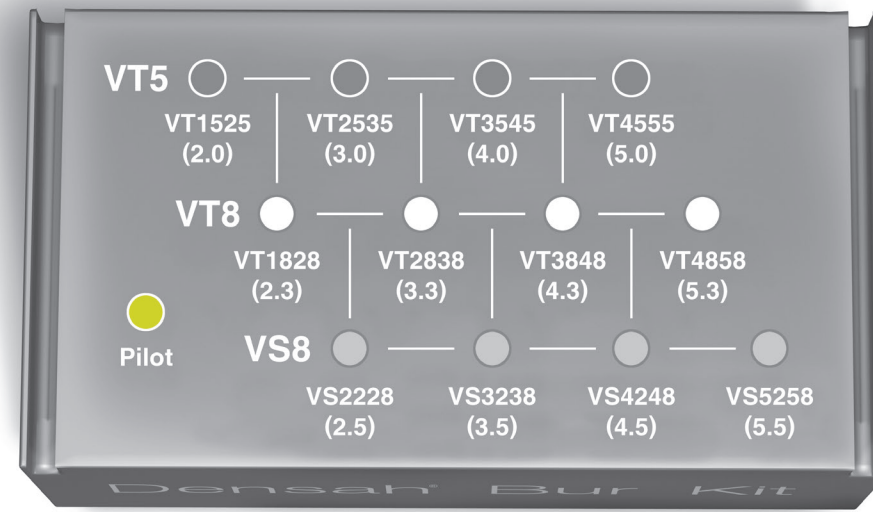

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																			
Straumann®			Microcone																
			Soft Bone							Hard Bone (Mandible)									
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.																
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Straight	3.0		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	—	
Straight	3.5		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	—	
Straight	4.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—		Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	—	—	
Straight	4.5		Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	—	—	
Straight	5.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VS4248* (4.5)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	—	—	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

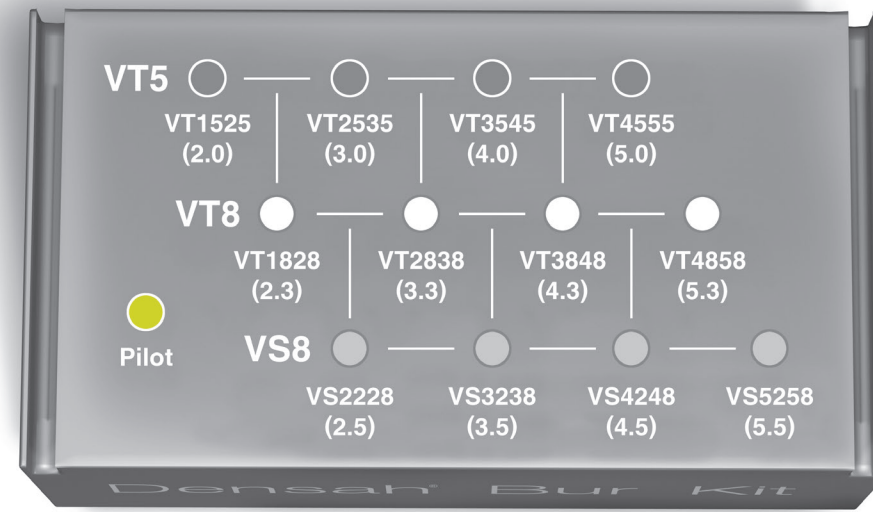

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																	
Straumann®			Procone														
			Soft Bone							Hard Bone (Mandible)							
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.														
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Densah® Bur Block Display
Straight	3.3		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VS2228* (3.0)	—	—	—	
Straight	3.8		Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—		Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Straight	4.3		Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—		Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Straight	5.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (3.3)	VS4248* (3.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

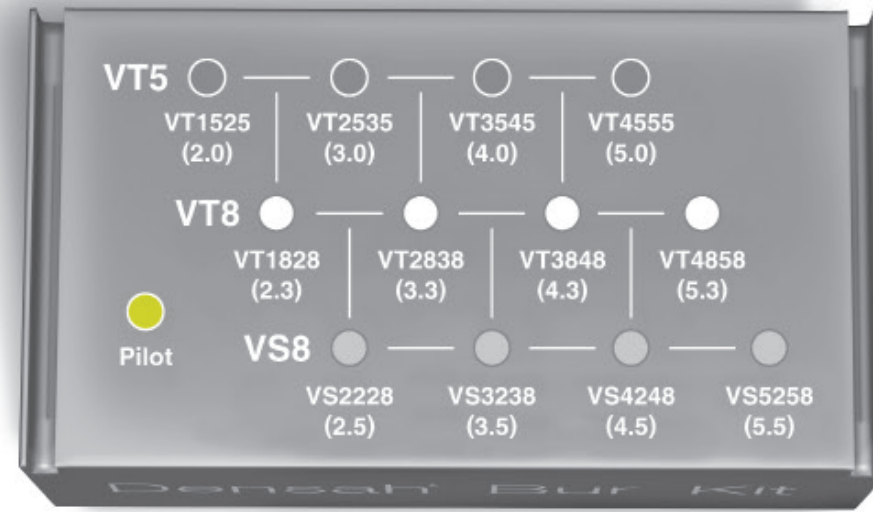

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs

Straumann		TLC, BLC																
		Soft Bone							Hard Bone (Mandible)									
		In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.																
Geometry	Major Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Tapered	3.3	Pilot	VT1828* (2.3)	—	—	—	—		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	—	—	
Tapered	3.75	Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	—	
Tapered	4.5	Pilot	VT1525 (2.0)	VT2535 (3.0)	VS3238* (3.5)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	—	
Tapered	5.5	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545 (4.0)	VT3848* (4.3)	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248 (4.5)	VT4555* (5.0)	
Tapered	6.5	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858 (5.3)	VS5258* (5.5)		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858 (5.3)	VT5565* (6.0)**	

*Denotes implant placement.

*Clinician judgement and experience should be applied in conjunction with this suggestive Implant System Drilling Protocol

*Clinician must follow their implant systems recommended insertion torque guidelines.

**VT5565 is not included in the Universal Densah® Bur Kit and will need to be purchased separately.